

TERMOHUB ECONOM

Termohub mixture preparation procedure

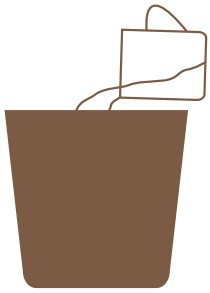

2 litres of water


Fill a suitable container with **2 litres of room temperature water.**

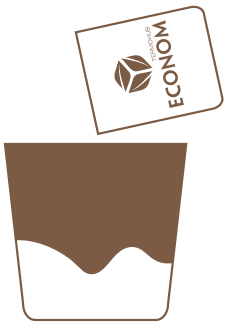

TERMOHUB ECONOM


Pour **entire bag of dry Termohub mixture** into the prepared container of water.

3 - 4 minutes stirring, 5 minutes resting

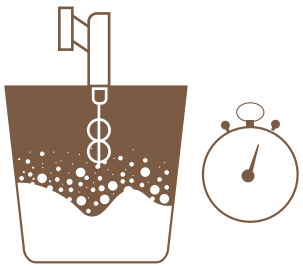

Use a **hand-held construction mixer** to mix. Maximum **speed 600 rpm**.

Stir for 3 - 4 minutes. Then let the Termohub mixture **rest for 5 minutes.**

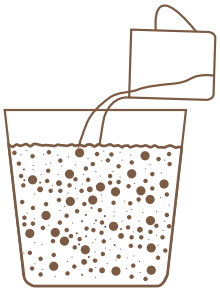

Adding more water

Keep **adding water to the Termohub mixture very slowly and keep mixing.**

For one bag of dry mix you will need about 8 - 10 litres of water.

Consistency control

After the mixture has rested for 5 minutes, check the consistency with a trowel. Scoop the mixture and turn the trowel over.

The prepared mixture shouldn't be runny or fall off.



This Termohub mixture is now ready for use.

TERMOHUB ECONOM

Preparing the base for application

Remove dirt, dust, or grease from the wall where you want to apply Termohub mixture.



Moisten the prepared base with water.



When using Termohub mixture for plastering, we recommend **using suitable straight edge tools** to ensure plaster uniformity.



Now you can start the application with a **plastering trowel**.



We wish you much success with our product.